

S P A R K

 
deeper

Spark Guide




Online version

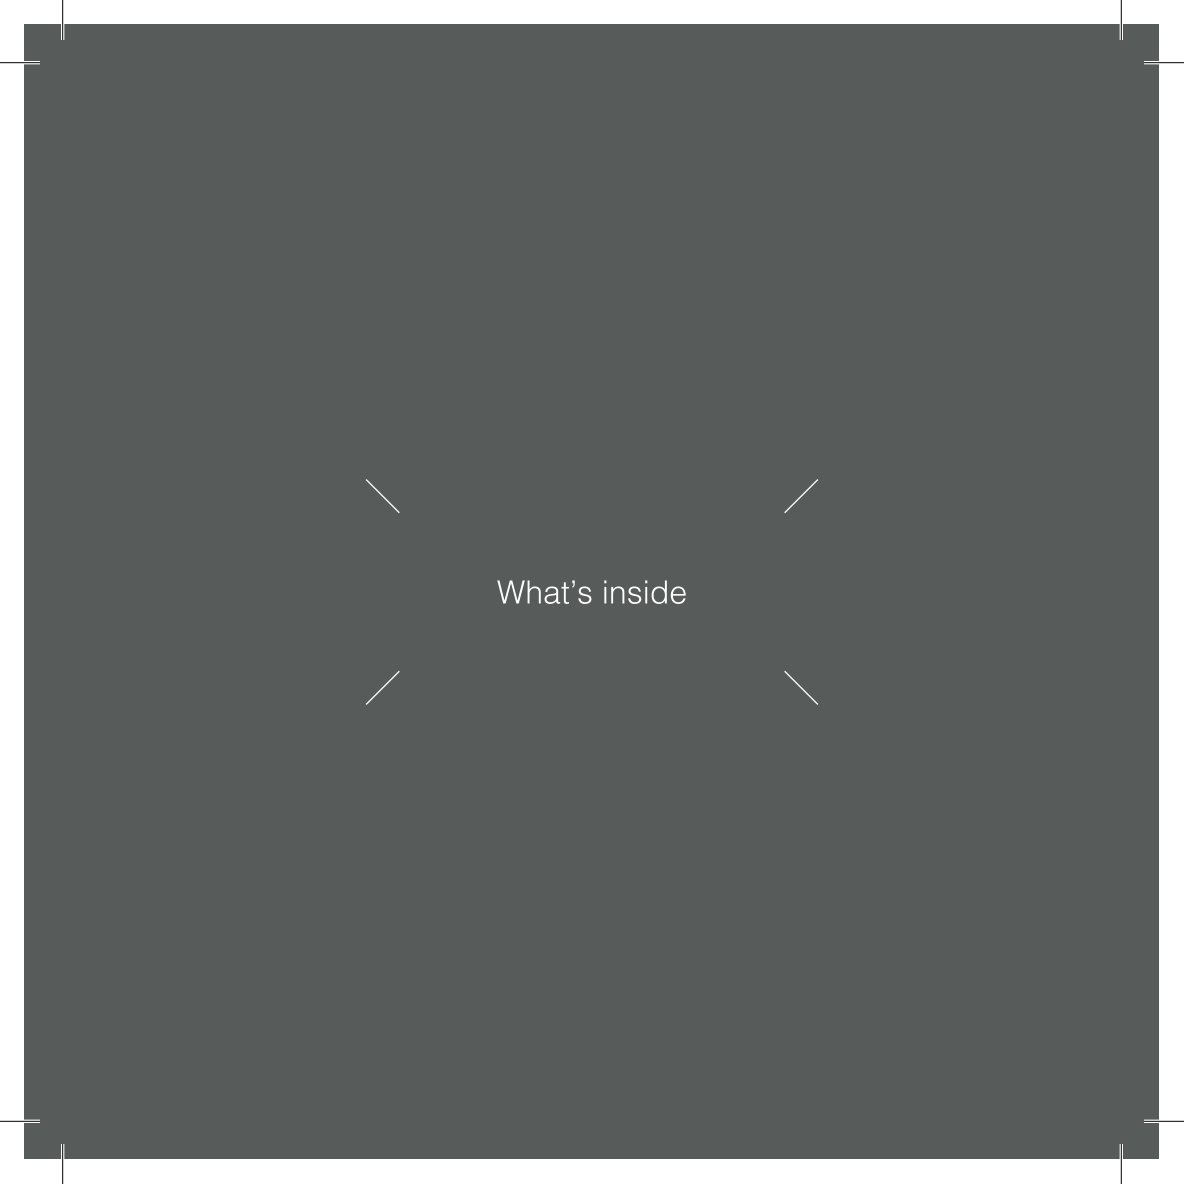


A dark gray square with a thin white border. At each of the four corners, there is a small white L-shaped mark, resembling a corner bracket or a staple mark. In the center of the square, the text "What's inside" is written in a white, sans-serif font.


What's inside

 Spark Bait Boat

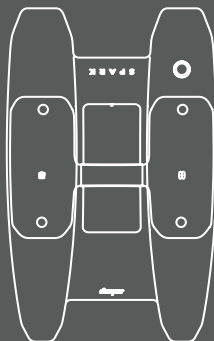


Maintenance kit

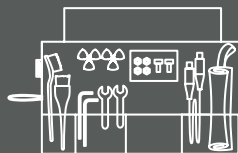 

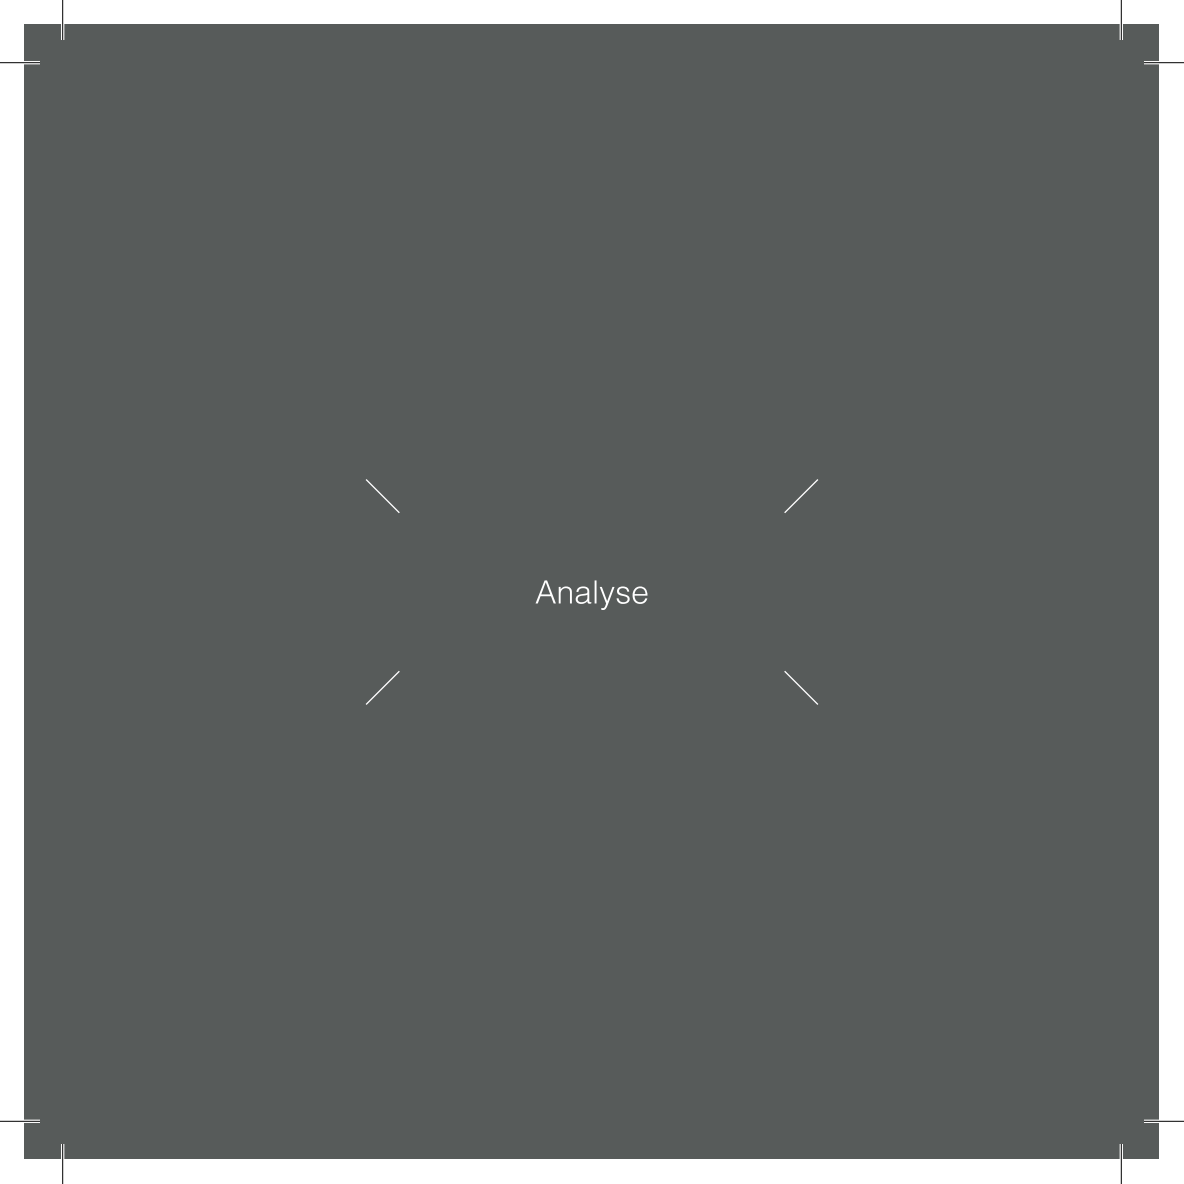 A dark gray square with a thin white border. At each of the four corners, there is a small white L-shaped mark, resembling a corner clip or a piece of tape. In the center of the square, the word "Analyse" is written in a white, sans-serif font.


Analyse

 Spark top view

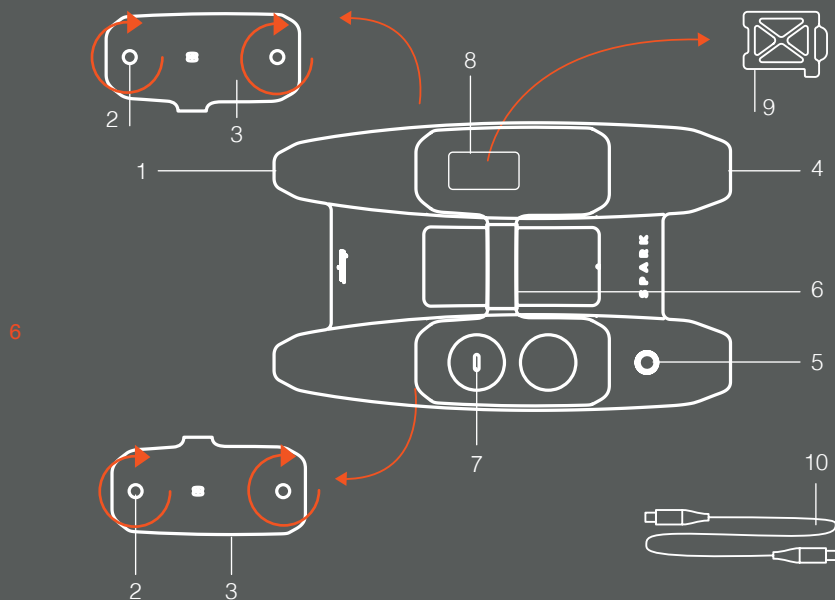


1. Headlights 2. Lid Open/Close Screws 3. Lid 4. Tail Lights 5. On/Off Button and Indication 6. Handle 7. Charging Input 8. Battery Compartment 9. Removable Battery 10. Charging Cable.

 Spark bottom view

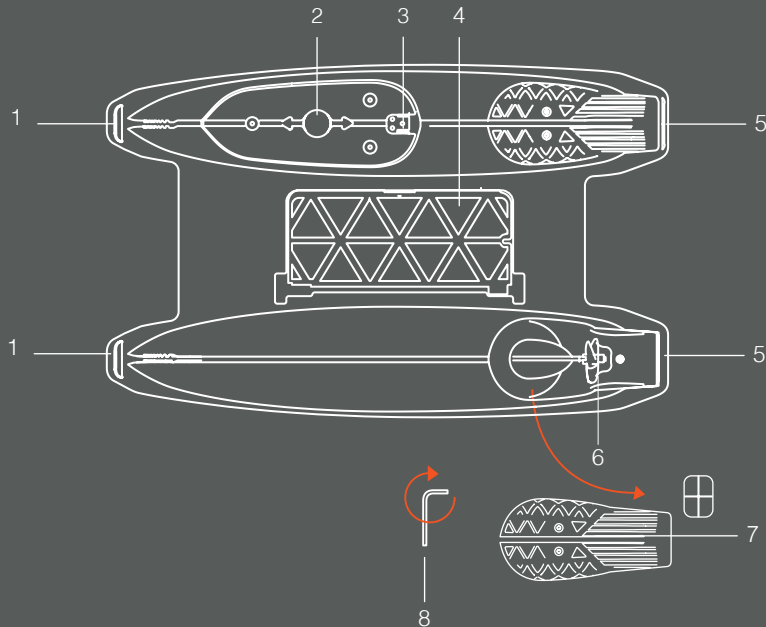

1. Headlights 2. Sonar 3. Water Contact Sensor 4. Hopper
5. Tail Lights 6. Propeller 7. Weed Guard Protector and Weed Guard Cross
8. 2.5 Hex key for Weed Guard.

 
Maintenance kit

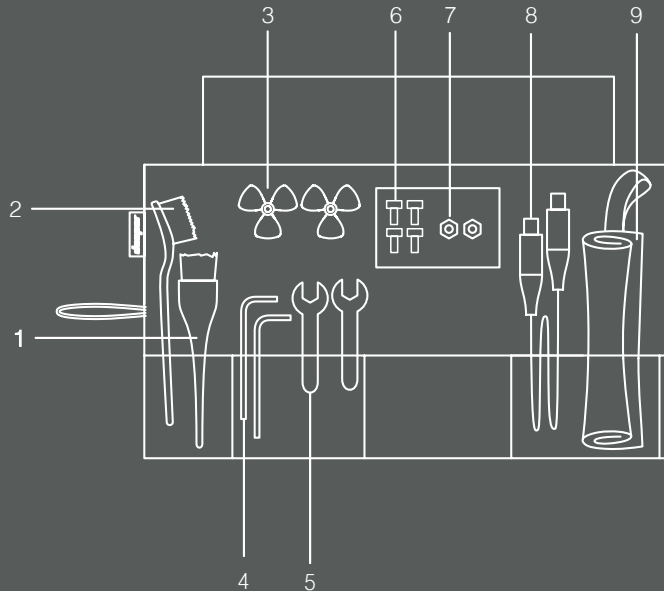

1. Brush 2. Angle Brush 3. Spare Propellers - 2x 4. 2.5 Hex Key for Weed Guard 5. Propeller Wrench - 2x 6. Spare Screws for Weed Guard - 4x 7. Nuts for Propeller - 2x 8. Charging Cable 9. Fabric Wipe.

Preparation

 Charge

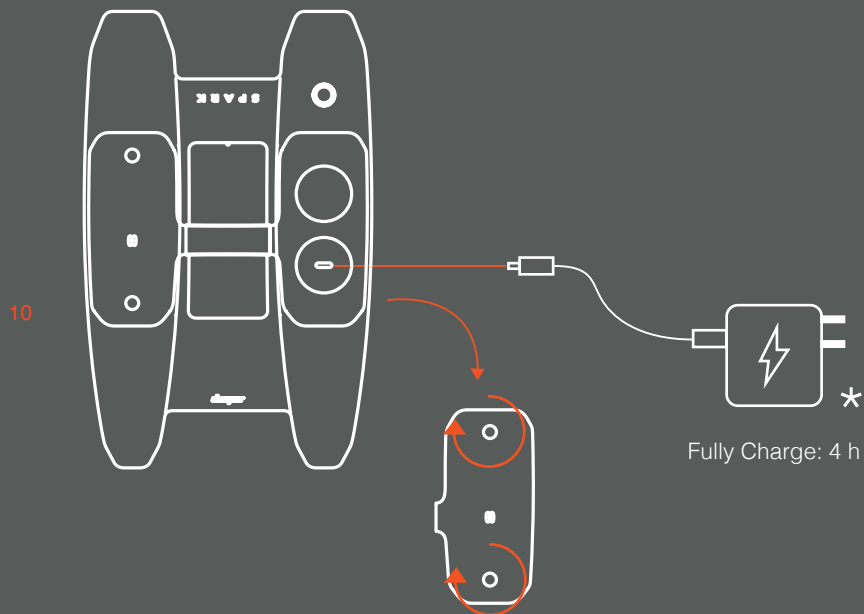

* Charger is not included, use at least 45w charger

Prepare App

 


1. Download Fish Deeper App
2. Create an account
3. Download an offline map of your location

Scan to download
our app




Update Spark bait boat

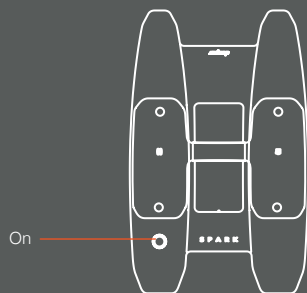

12



 Connect via Wi-Fi
(see page 16 of this manual)




Update
Bait Boat
Firmware
if available

Keep Phone High




 Hold phone at least
at waist level or higher
for stable connection

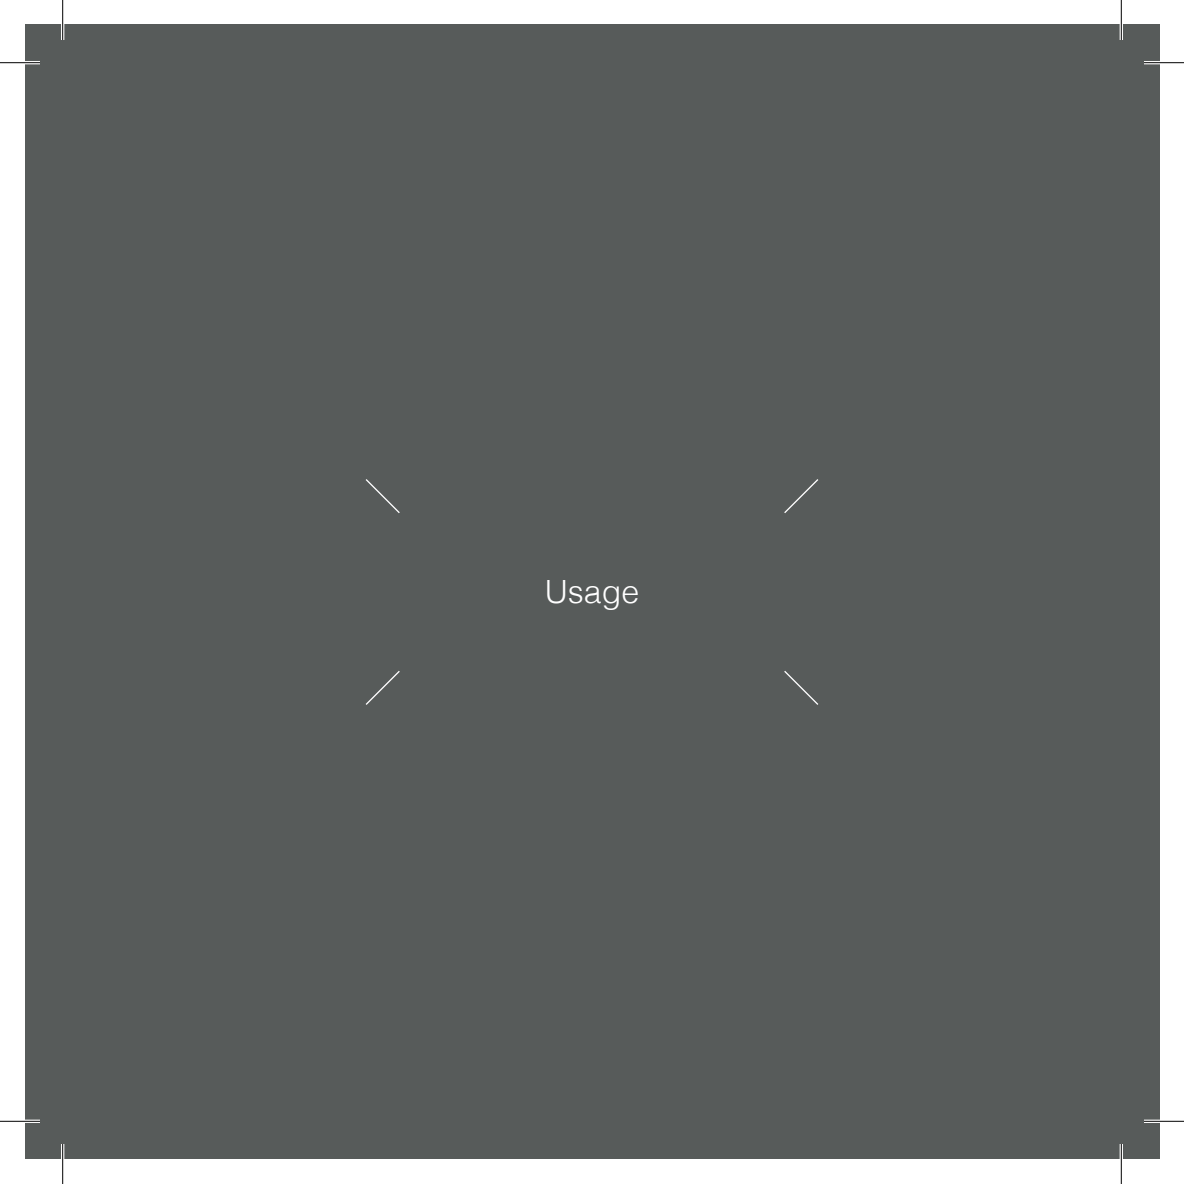A dark gray square with a thin white border. At each of the four corners, there is a small white L-shaped mark, resembling a corner bracket or a staple mark. In the center of the square, the word "Usage" is written in a white, sans-serif font.

Usage


 
Switching on & Wi-Fi connection

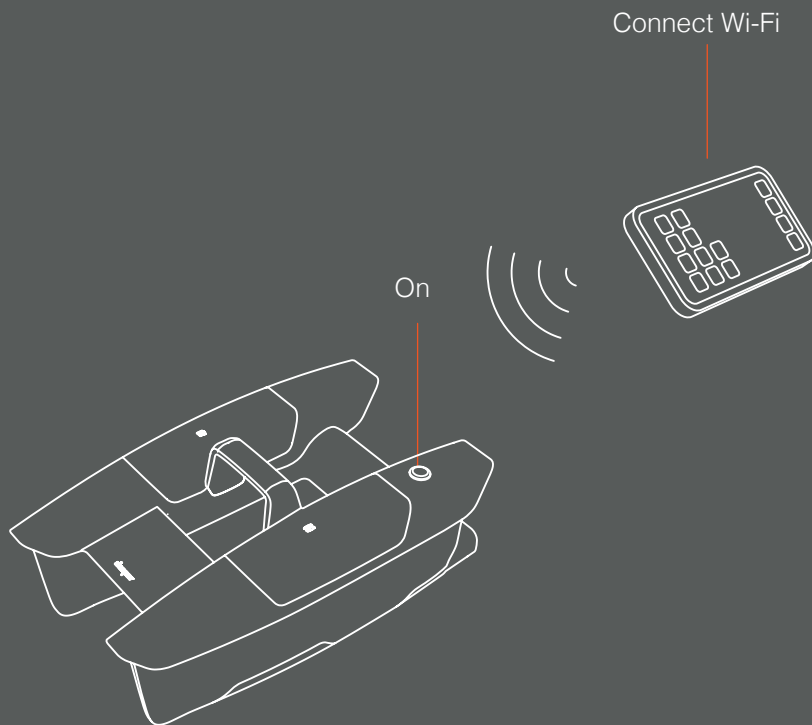


Connect Wi-Fi



  
16

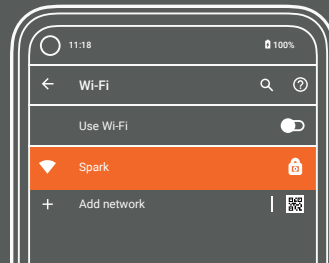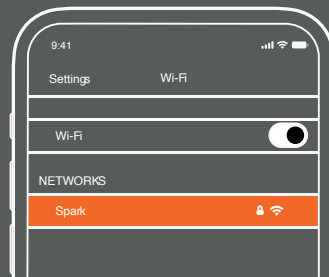

Controller is in the App

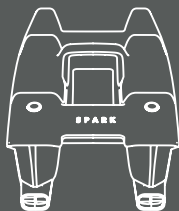 


Range
up to 150 m (492 ft)

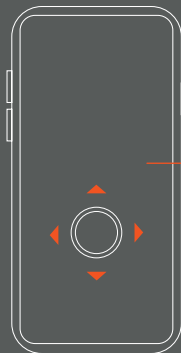 


Control with
app controller




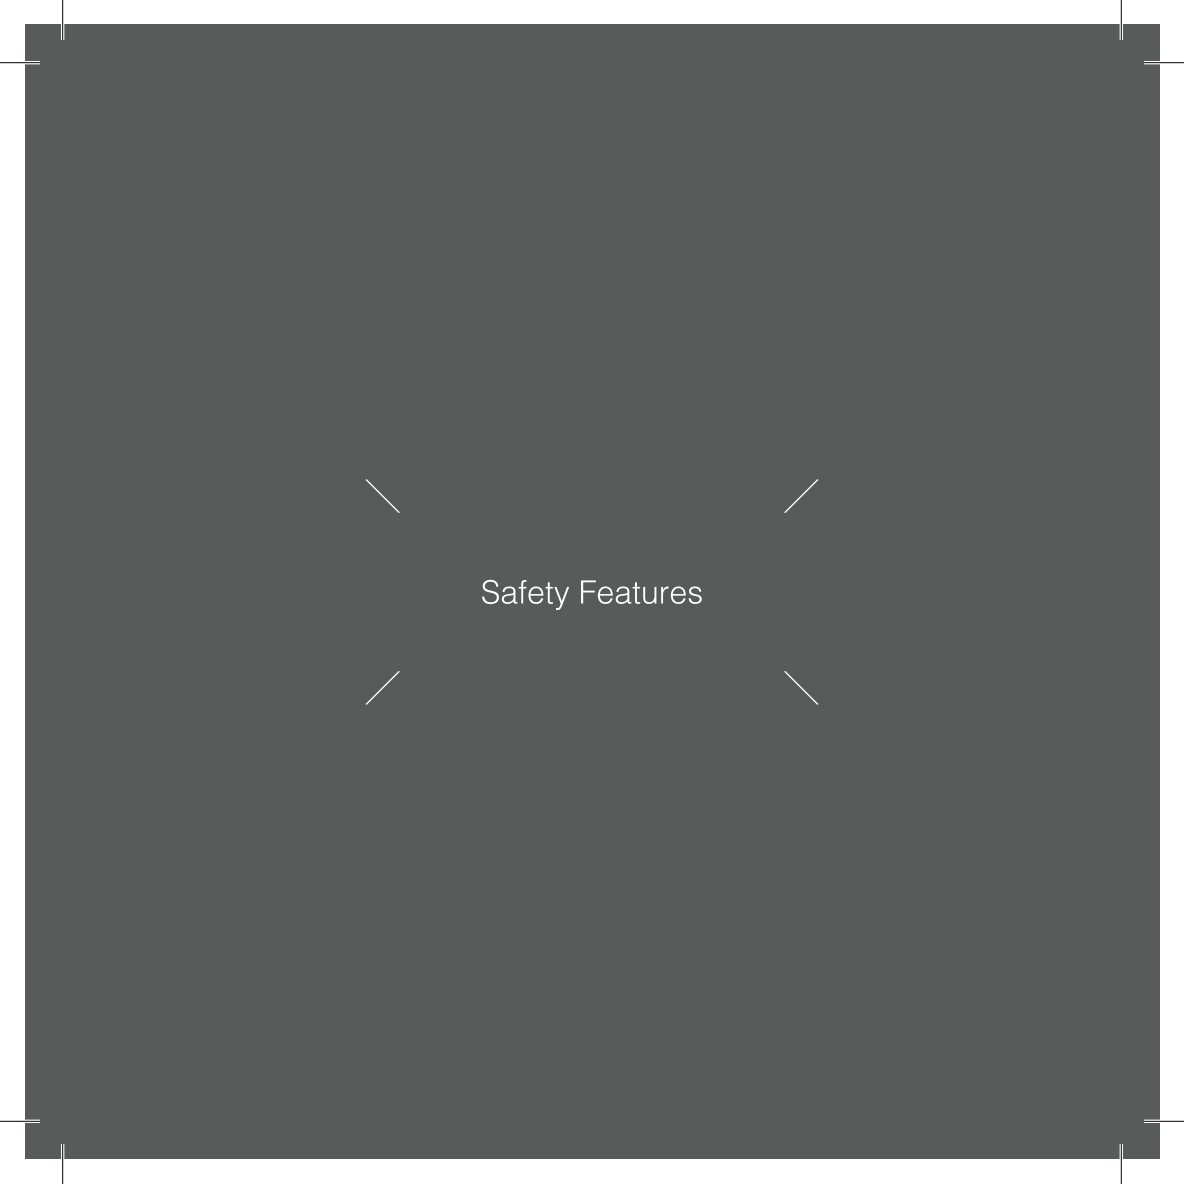 

Safety Features

  
Out of range & Low Battery

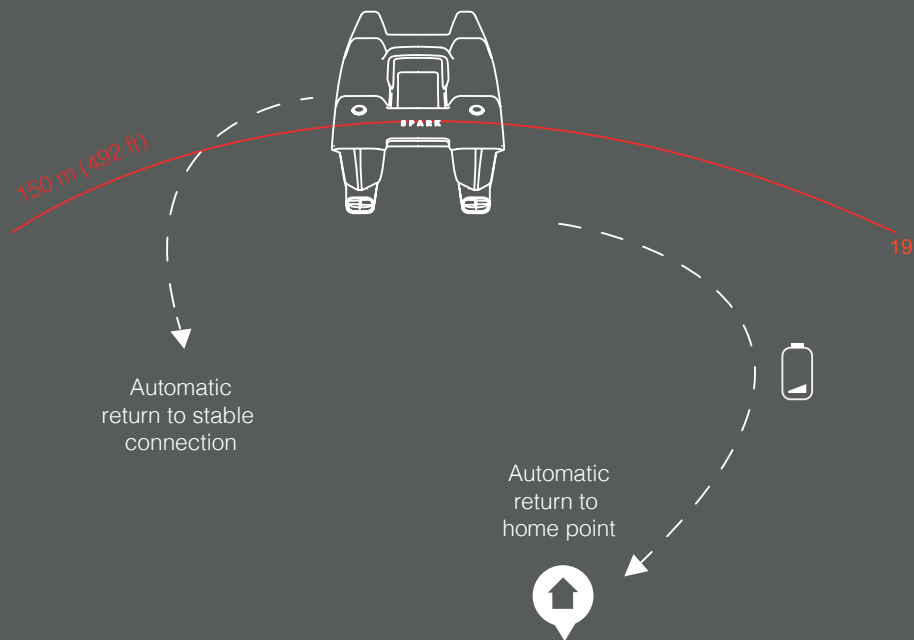

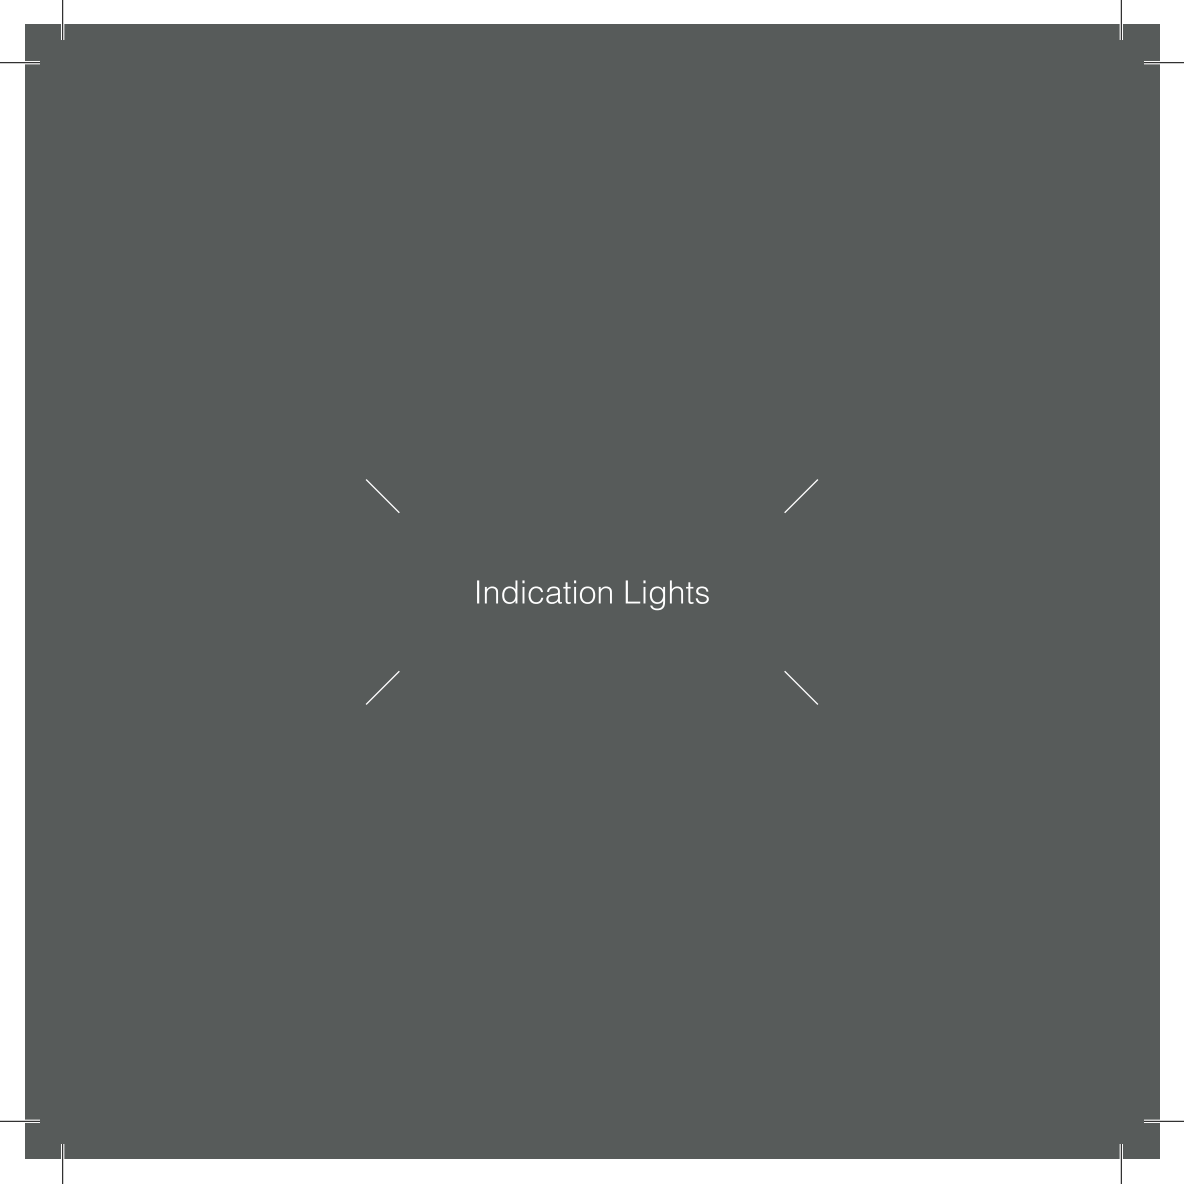

Indication Lights

 Battery charging lights & status

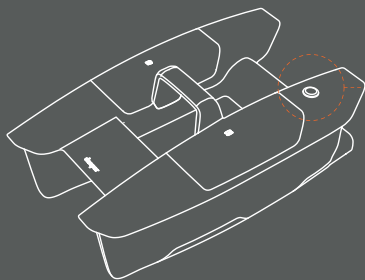

	Charging blinking
100% - 10%	
10% - 0%	

 
Battery
state



21



Connected with phone

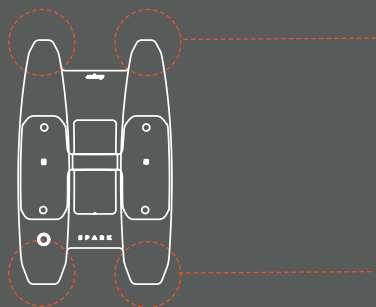


White headlights
when connected





Red tail lights when
connected

 22



Fish Deeper app
connected

  Battery Light Status

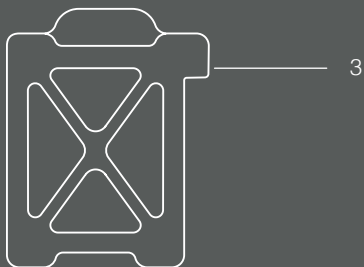


23

1. Battery Indication Lights 2. Battery Indication Button 3. Power Input Contacts.

Open Hopper

 
24

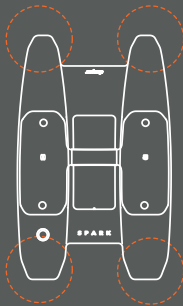


Blinks 2 times



 Autopilot

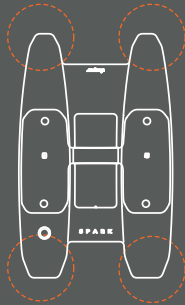


 Emergency mode
-returning home,
within range or stuck

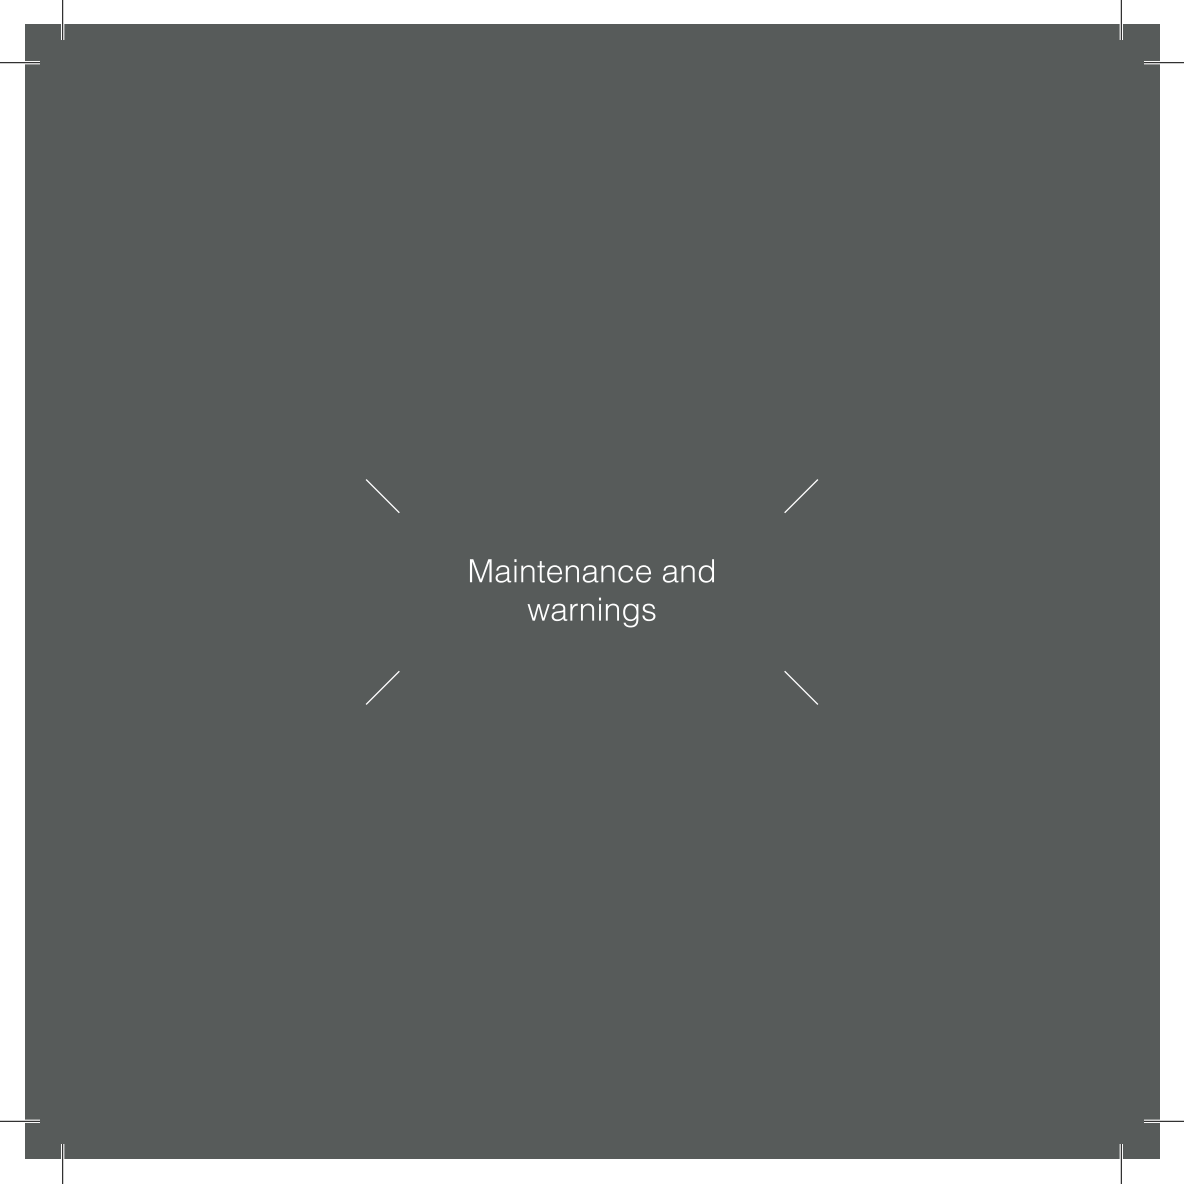

Maintenance and
warnings

 
Charging

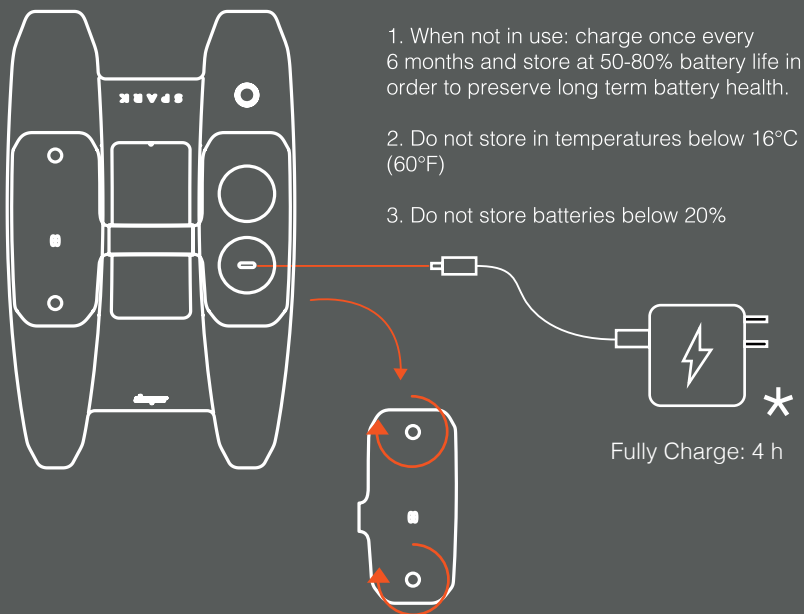

*Charger is not included, recommended at least 45W charger.

Release condensation or moisture

 28

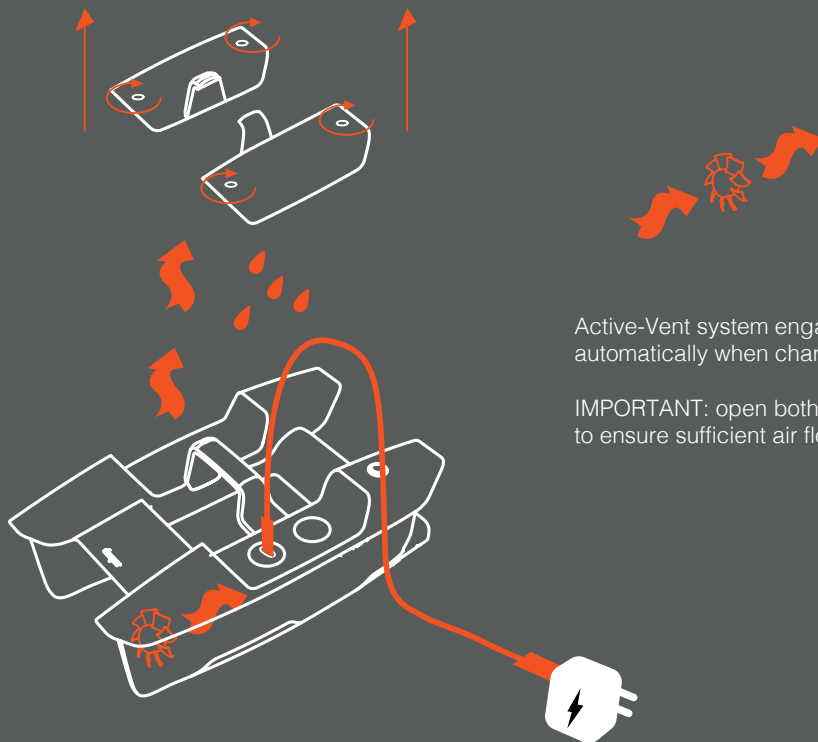


Active-Vent system engages automatically when charging.

IMPORTANT: open both lids to ensure sufficient air flow.

Moisture Removal, Active-Vent.

 Bad weather conditions

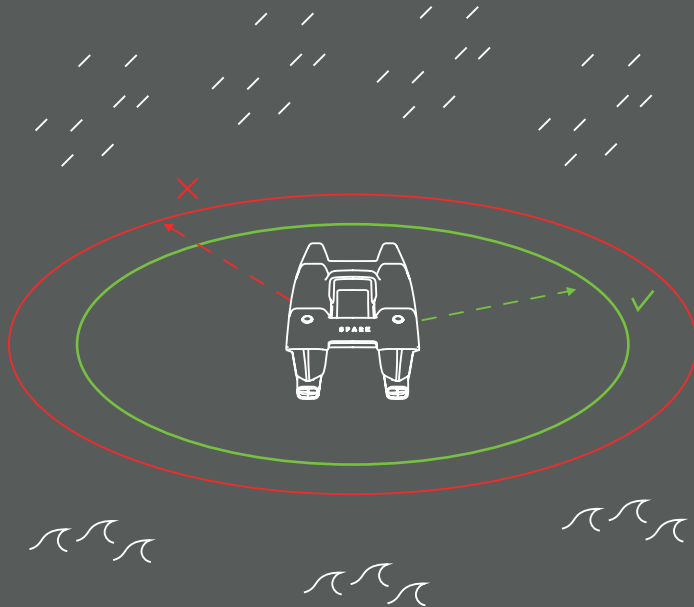


29

Bad weather might affect Spak range and connection.
Note: range capacity will differ depending on conditions.

Avoid collisions

 
30

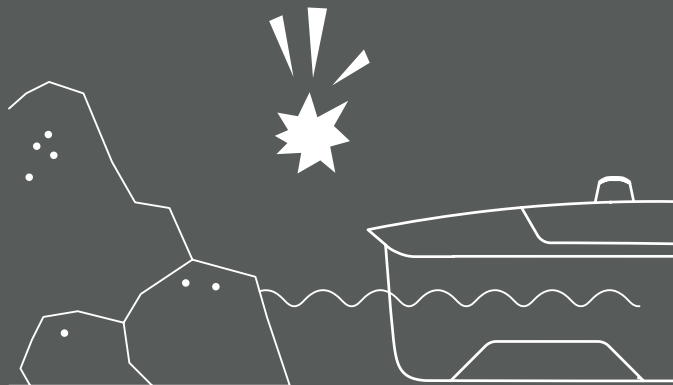


Remove & clean



 
Keep water sensors clean
- use sponge and WD-40
or electronic contact cleaning
solution periodically.

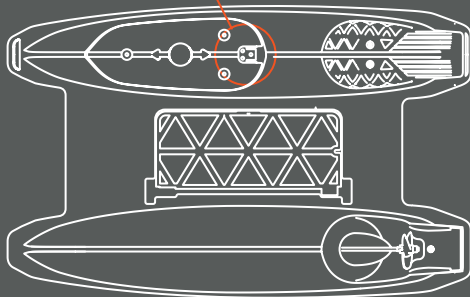

Keep clean and dry after usage

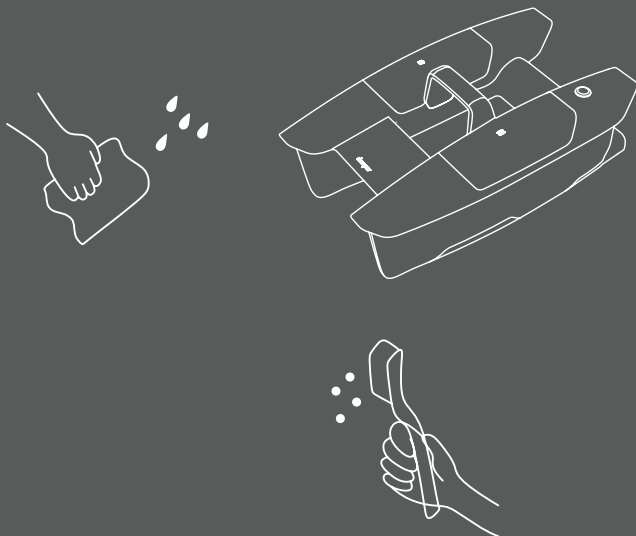 

Remote control extends range

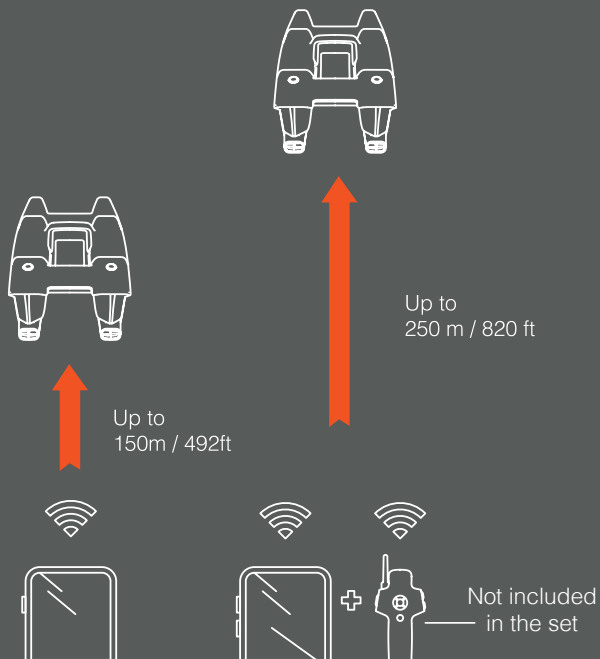 


Avoid extreme temperatures

0 C / 32 F



 34

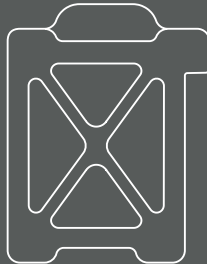


+40 / 104 F



Lithium-Ion

 Avoid weed and rig tangle

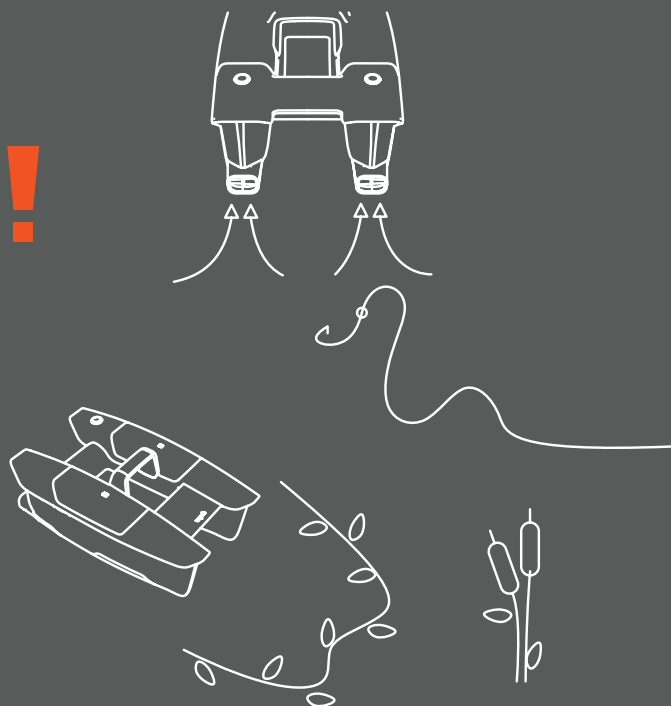

deepersonar.com

support@deeper.eu

www.youtube.com/@Buydeeper

deeper